




iMac Intel 27" EMC 2429 Power Supply Replacement

Replace the power supply in an iMac Intel 27" EMC 2429.

Written By: Phillip Takahashi

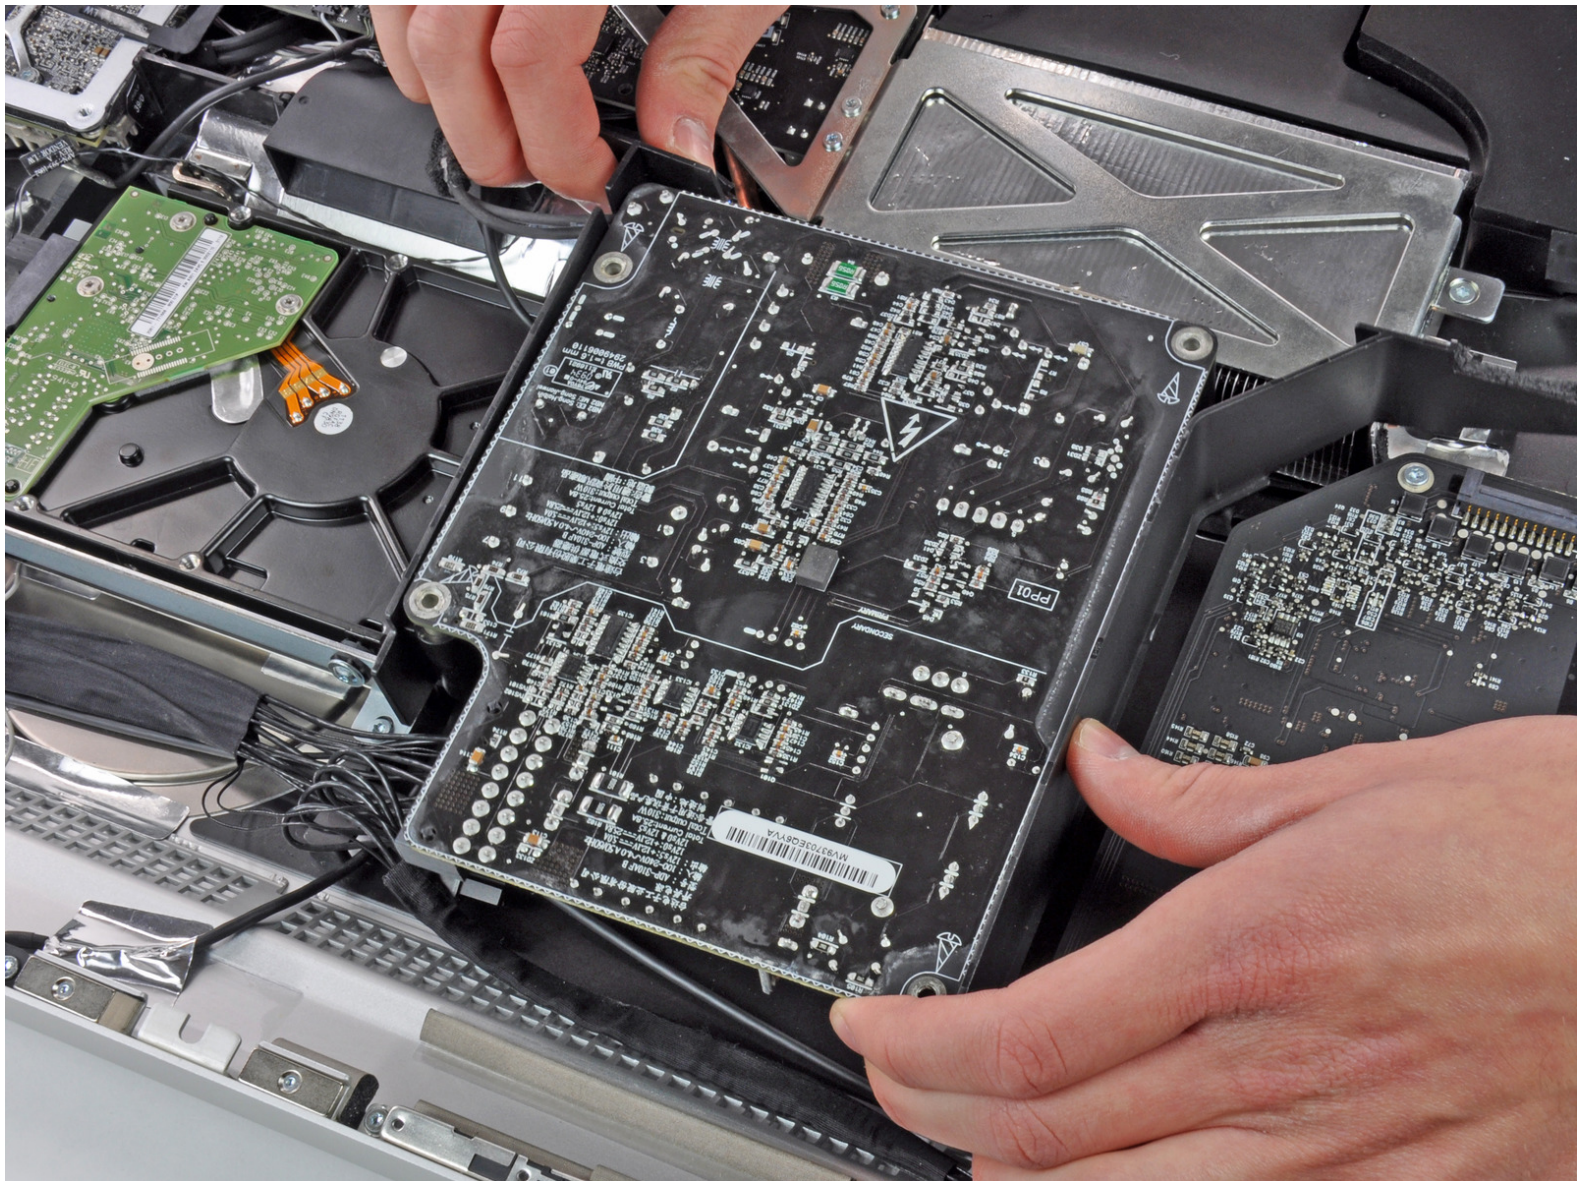

INTRODUCTION

This guide will help you replace the power supply.



TOOLS:

- [Heavy-Duty Suction Cups \(Pair\)](#) (1)
- [Paper Clip](#) (1)
- [Spudger](#) (1)
- [T10 Torx Screwdriver](#) (1)



PARTS:

- [iMac Intel 27" \(EMC No. 2309\) Power Supply](#) (1)

Step 1 — Glass Panel



- Stick a heavy-duty suction cup near each of the two top corners of the glass panel.
- i To attach the [suction cups](#), first position the suction cup with the movable handle parallel to the face of the glass panel (as highlighted in the second picture).
- While lightly holding the suction cup against the glass, raise the movable handle until it is parallel with the other handle (as highlighted by the third picture).
- i If your suction cups refuse to stick, try cleaning both the glass panel and the suction cup with a damp soft, lint-free cloth. (Dampen with distilled water, and if needed, an equal ratio of distilled water and white vinegar for best results.)
- ! Do not use the suction cups to carry the display glass because if one of them fails to stick, you could drop the screen and break it.
- i The original iMac box makes a good place to store the glass panel. Otherwise, a padded horizontal surface, like a towel on a desk will do nicely.

Step 2



- Gently lift the glass panel perpendicular to the face of the LCD enough to clear the steel mounting pins attached along the underside of the top edge of the glass panel.
- Pull the glass panel away from the lower edge of the iMac and carefully set it aside.
 - ⚠ Don't use the suction cups to carry the glass panel—if either one loses its grip, the panel could fall and break.
 - ⚠ After setting the glass panel down safely, be sure to release the suction cups, as the suction force over time, can crack the glass.
- ✦ During reinstallation, be sure to meticulously clean the inside of the glass panel and the face of the LCD as any dust or fingerprints trapped inside will be annoyingly visible when the machine is turned on.

Step 3 — Display




- Remove the eight T10 Torx screws securing the LCD to the outer case.

⚠ Be careful not to touch the display as the oil from your fingers may leave a residue that can be difficult to remove.


ⓘ If necessary, peel the EMI gaskets located near the top center edge of the display assembly.

Step 4

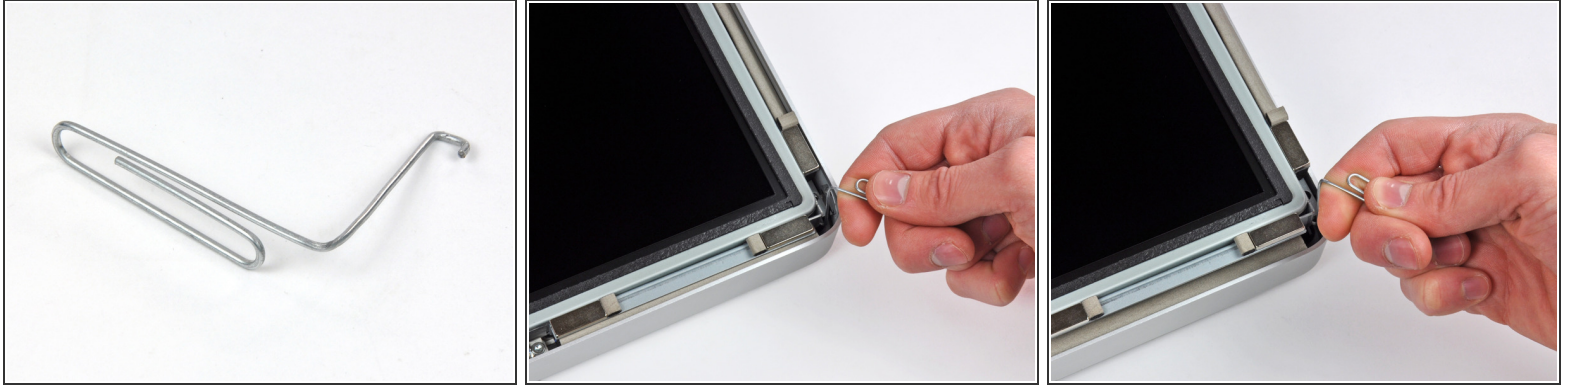

- Carefully lay the iMac stand-side down on a flat surface.
- ⓘ Due to tight tolerances, you will have to use a thin hooked tool to lift the display out of the outer case. As seen in the first picture, we made one out of a bent paperclip.
- ⓘ Alternatively, our [Dual Hard Drive Kit](#) includes a pair of tweezers with an angled tip that are great for this task.
- Use a thin hooked tool to lift one side of the top edge of the display by its steel outer frame.
- ⓘ After lifting the top edge of the display on one side, hold it out of the outer case while you use a hooked tool to lift the other side.
- Raise and hold the display high enough to access the cables.
- ⚠ Do not lift the top edge of the display out of the outer case too far, as several short ribbon cables still connect the two components.


Step 5

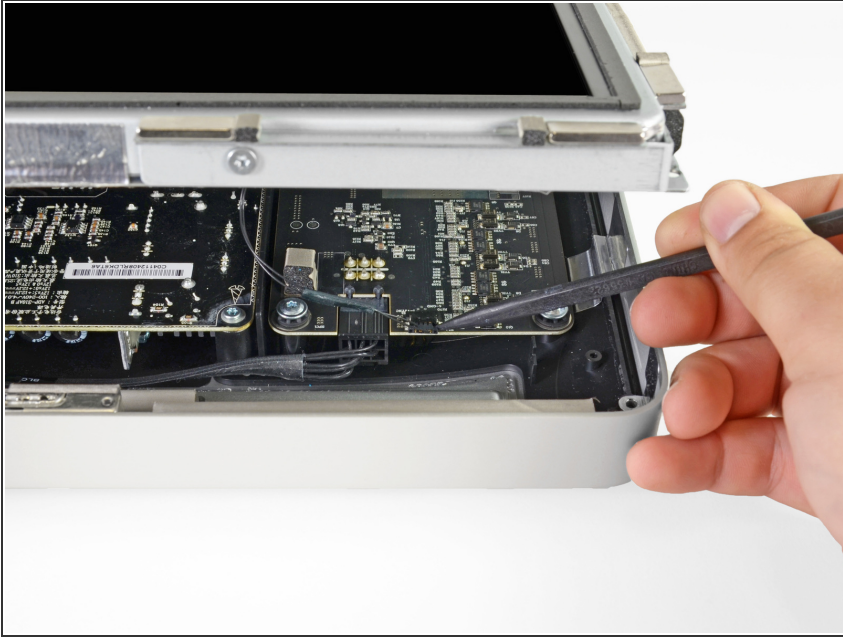

- Disconnect the vertical sync cable in the upper left corner of the screen. Use the tip of a spudger to push on the connector's side tabs and gently **walk** it out of its socket.



Step 6



 This step brings your hands close to the exposed rear of the power supply. To avoid a high-voltage shock from the many large capacitors attached to the board, do **NOT** touch the rear of the power supply.

- Disconnect the LED backlight driver cable with your hand by pressing the tab down and sliding it towards the bottom of the display.

Step 7

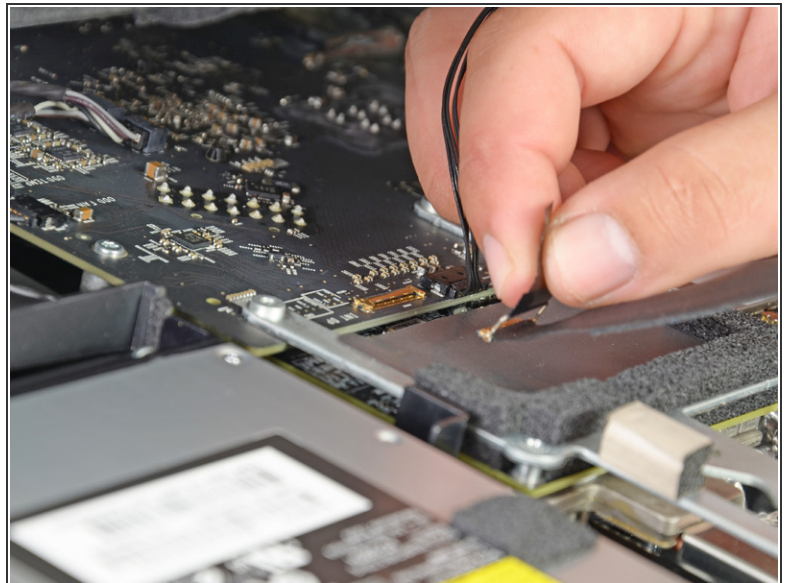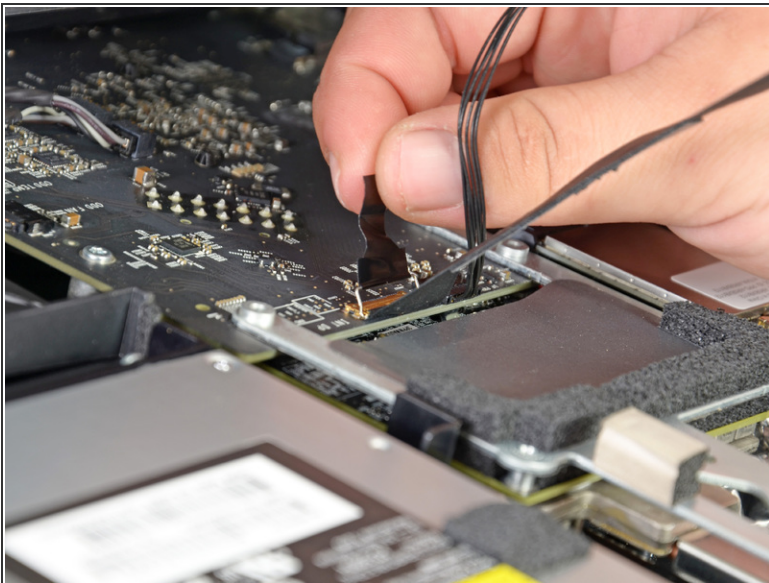


- Pull the black tab straight up to disconnect the latch on the display data cable ZIF connector.

 Do not pull up too hard or you will damage the connector and socket.

- Continue to pull the black tab up toward the top of the device, to detach the display data cable.

Step 8

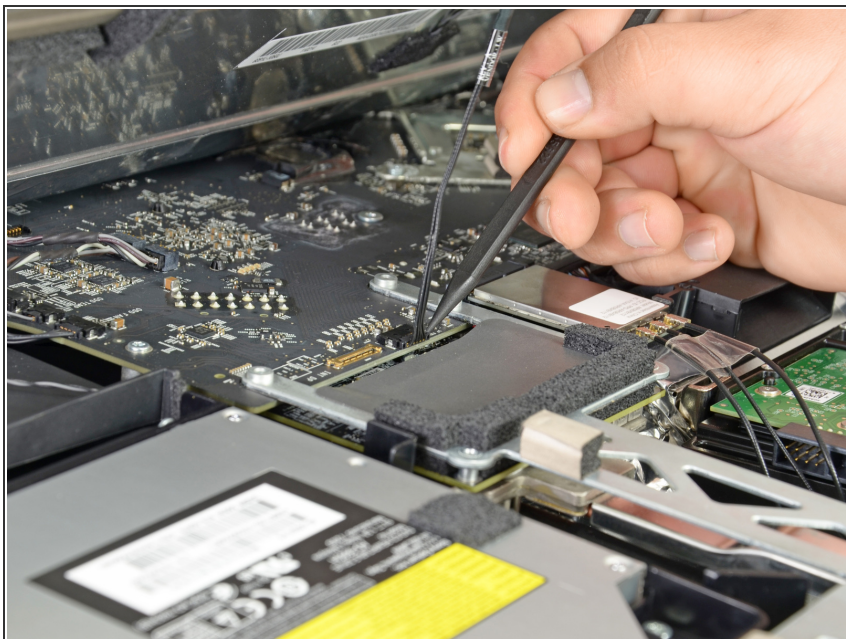



- Use the tip of a spudger to disconnect the display power cable next to the display data cable.


Step 9



- Carefully pull the display toward the top edge of your iMac and lift it out of the iMac case.


Step 10 — Power Supply

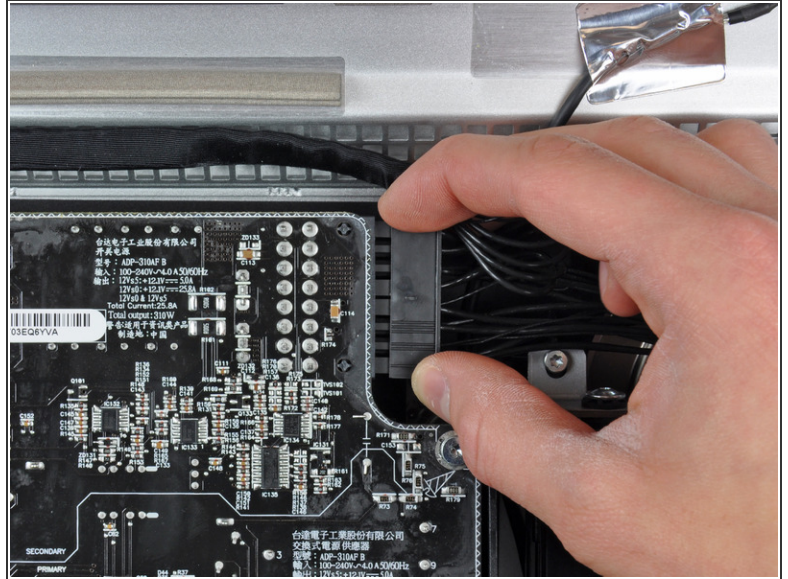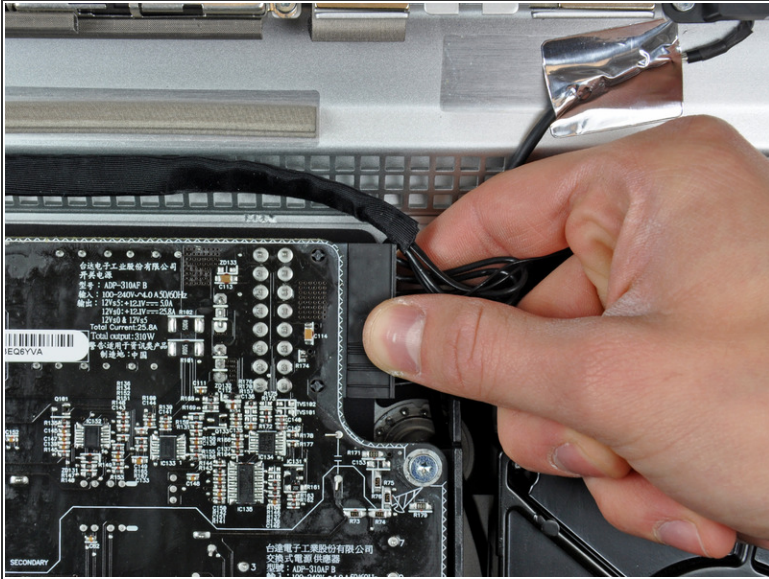

 The next few steps bring your hands close to the exposed face of the power supply. To avoid a high voltage shock from the many large capacitors attached to the board, **do not** touch the face of the power supply.


- Disconnect the DC power cable by using your index finger to depress the locking mechanism on the back of the connector while you pull the connector away from its socket on the power supply.
- Once the locking mechanism has cleared the socket, pull the DC power connector away from the power supply.

Step 11

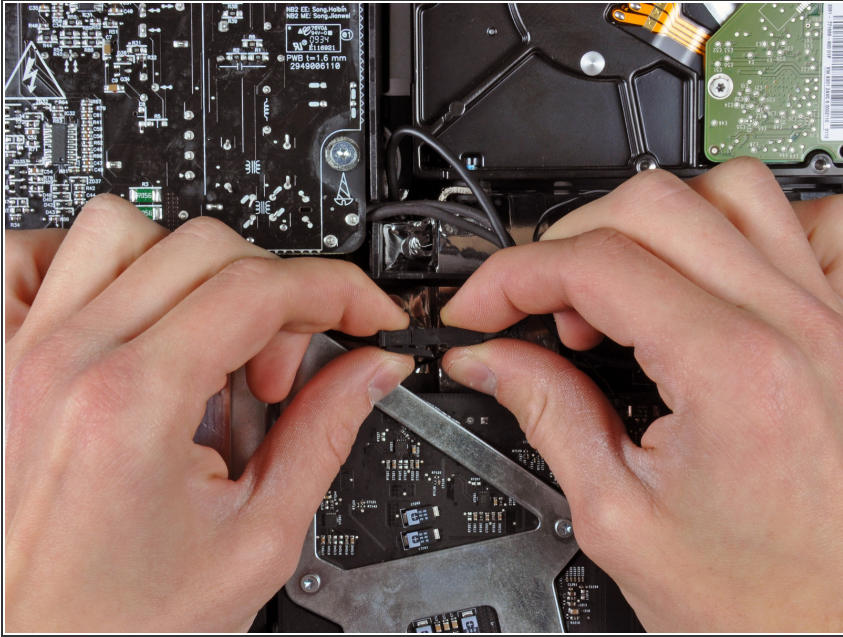



- Disconnect the AC power inlet cable by depressing the locking mechanism while pulling the connector away from its socket.

Step 12

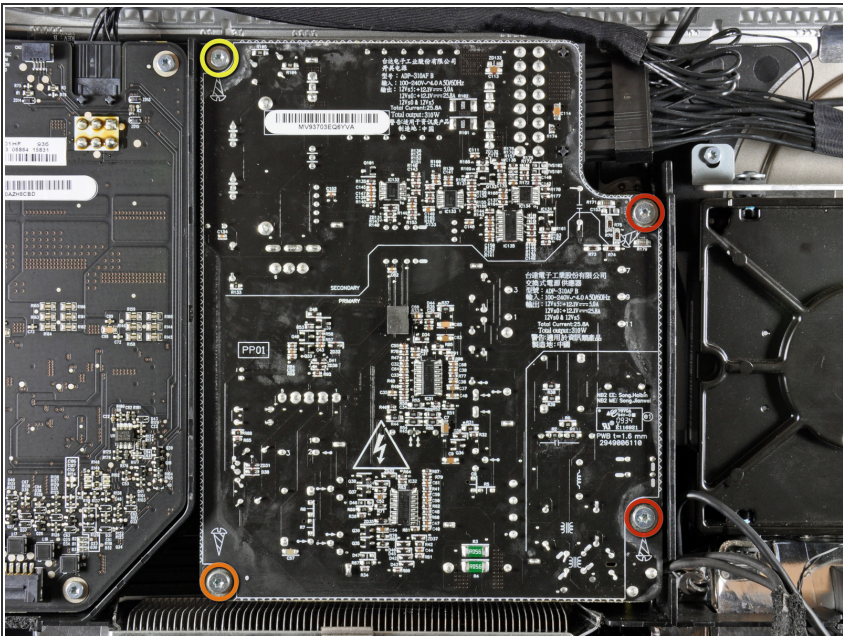

- Remove the following screws securing the power supply to the outer case:
 - Two fine-thread shouldered T10 Torx
 - One coarse-thread shouldered T10 Torx
 - One short coarse-thread T10 Torx

Step 13

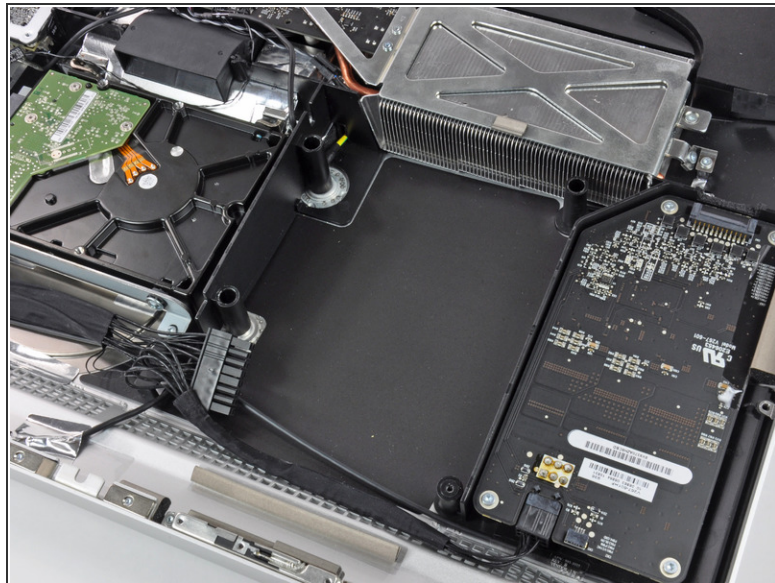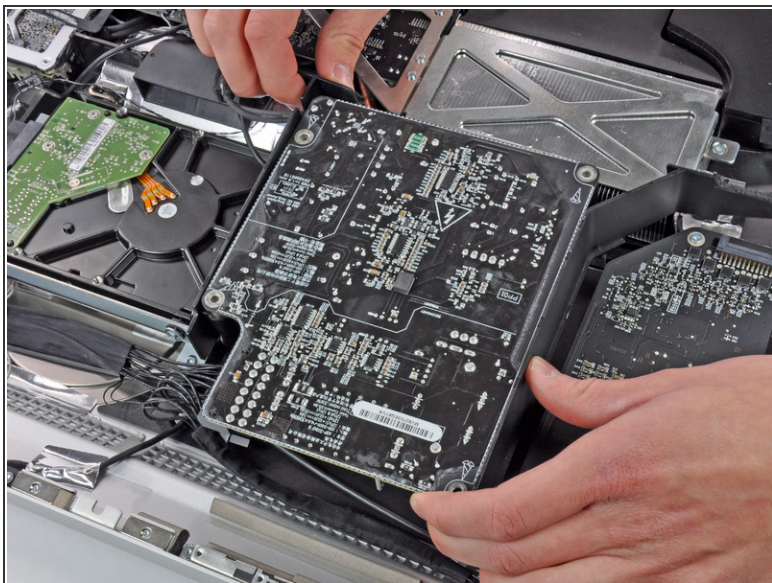

- Lift the power supply out of the outer case while gently de-routing it from any wires that may get caught.
- ⓘ Two plastic brackets may lift out with the power supply. Their correct orientation is shown in the second picture.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 04:49:54 AM.